
# LIGHT BARRIER **FC250** SYNCHRONIZED RX - TX

**INSTRUCTION MANUAL** 

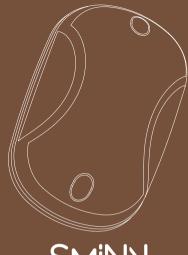

SMINV

innovative in electronics

## **DESCRIPTION**

SMINN'S FC250 light barrier is composed by a RX receiver and a TX emitter.

Devices that are built using high quality materials and components and the latest technology. They are made taking into account the current regulations for usage in residential, commercial and light industry environments.



#### **OPERATION**

Once the light barrier is correctly installed, the emitter sends a beam of infrared light modulated by pulses to the receiver, setting up a safety barrier.

Each time the light beam is broken the receiver activates the internal red led and activates the alarm relay. All regulations on security of the installation must be strictly observed.

#### **APLICATIONS**

The FC250 light barrier has been designed for protection in automatic doors, barriers and blinds. It can be used for access detection in alarm systems and traffic control, if the distance between emitter/receiver is not more than 15 meters.

#### **INSTALLATION**

Check the integrity of the product to be installed.

 Place it away from heat sources, humidity or excessive radiation and to a minimum height of 30-40 cm from the floor, preventing reflection problems with the light beam.

THE MANUFACTURER IS NOT RESPONSIBLE
OF THE DAMAGE CAUSED BY AN INCORRECT
INSTALLATION OR IMPROPER OR CARELESS USE

- Avoid GASES or INFLAMMABLE PRODUCTS, as they are a serious danger for security in electric installations.
- Place emitter and receiver one in front the other, in the same axis and the same height.

The receiver has a red LED that switches on when there is no visibility between the emitter and receiver, making alignment and diagnostics easier.

• Select the operating distance with the Jumper J1 placed in the receiver. See **Fig. 5** 

Jumper ON distance < 15 m
Jumper OFF distance > 15 m
(maximum range)

NOTE: the operating distance can be dramatically reduced because of external, adverse conditions such as dust, excess of light, rain, fog, etc.

 Select the synchronous mode with the Jumper J2 placed in the emitter if it is powered with an AC power supply. See Fig. 2

Jumper J2 ON continuous mode in AC and DC Jumper J2 OF synchronous mode only in AC

 With the synchronous mode, the emitter will project a beam of light modulated only in one of the half-cycles of AC current. That allows to install two sets of light cells very close to each other without interferences.

### Installing two sets of light cells:

If we install two sets of light cells, we should proceed as follow:

#### Powered with an AC power supply

In this case it is recommended to use the synchronous mode and install the emitters in one side and the receivers in the other one, but reversing their power supplies Fig. 2

Powered with direct current DC

In this case, the terminals 3 and 4 of the emitters have to be joined so they work in CONTINUOUS mode, and they should be installed in different sides of the gate so they do not interfere between them. See **Fig 1** 

Connect as indicated in the attached diagram, depending on the type of installation. Lastly, connect the power supply to the system and check if it works correctly.

#### **OPERATION VERIFICATION**

To verify the system is operating, interrupt the beam of light and check that the relay commutation activates. The receiver's alarm relay will be in open mode if there is not visibility between emitter/receiver. It closes contact when the beam of light is uninterrupted.

#### **MAINTENANCE**

Even though this product doesn't need any special maintenance, it is a good idea to keep in mind the instructions given by the installer, manufacturer and current laws about maintenance, repairs and device cleaning and documental control.

#### WARRANTY

This product has undergone a complete TEST during its manufacturing process that guarantees its reliability and proper operation.

The manufacturer provides 24 months of warranty to the product from the date printed in the product and against any anomaly that it may present in its appearance or operation.

Any damage caused by third parties, natural causes (flooding, fire, lightning, etc), arising from improper handling or installation, vandalism or any other cause non attributable to the manufacturer will void the warranty. The warranty only covers repairs or replacement of the damaged device. Any expenses derived from assembling, travelling, transport, natural wear of parts, etc., and, in general, any expenses that are not part of the repairs or replacement of the damaged element of the system are excluded.

The installer/provider will ask the manufacturer for an **RMA** number or authorization for transport of the system in warranty. Without this previous requisite, the manufacturer will not be able neither to process nor provide warranty service.

#### **WARNING**

This product must be used in istallations which has been conceived for, considering any other as improper use. The packaging and wrapping MUST NOT be dumped in the environment.

Keep products, packaging, wrapping, documentation, etc., out of the reach of children.

Follow the current local, national or European regulations. The information contained in this document may have some mistakes that will be corrected in future editions. The manufacturer keeps the right to modify the content of this document or the product without prior warning.

## WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT DIRECTIVE (WEEE)

In accordance with the European Directive 2002/96/EC about waste electrical and electronic equipment (WEEE), the presence of this symbol (see symbol at the bottom of this text) in the product or in the packaging, means that this article shall not be disposed in local non-classified waste streams. It is the user's responsibility to dispose this product taking it to a collection point designed for waste recycling of electrical and electronic devices. The separate collection of this product helps optimize the waste sorting and recycling of any recyclable material and also decreases the impact on health and the environment.

For more information about the correct wasting of this product, please contact the local authority or the distributor where you acquired this product.



#### **EC DECLARATION CONFORMITY**

The company ELSON SISTEMAS, S. L.

Pol. Ind. Torrelarragoiti, P6 · A3 · 1º

48170 Zamudio - Vizcaya

(SPAIN

Declares that

The product Manufactured by Under the trademark Created for FC 250 Synchronized light barriers ELSON ELECTRÓNICA, S.A.

**SMINN** 

Residencial, comercial and

industrial use.

This device meets the provisions contained in the article 3 of the R&TTE 1999/05/CE Regulation, as long as its usage is compliant to what was envisaged, having applied the following regulations:

Electromagnetic

Compatibility

EN 301 489-3 v1.3.1 (2001-11)

Low Tension

EN 60730-1 (2000)

Zamudio 2010.03.30

below

José Miguel Blanco Pérez Chief Technical Officer

# SMINN

innovative in electronics

#### **Elson Sistemas**

T. +34 944 525 120 www. sminn.com info@sminn.com Pol. Torrelarragoiti, P6 - A3 - 1º 48170 Zamudio - Vizcaya (Spain)

#### **TECHNICAL CHARACTERISTICS**

Range	15 m ( 30 m jumper J1 = OFF )
Suply	12/24 V AC/DC
Power	TX+RX lower than 50 mA
Casing	PA6 + 30% FV
	PC infrared+ filtro UV
Ingress protection	IP45
Size	H80 x W60 x Z30
Infrared beam	880 nm
Freq. modulation	600 Hz
Contact relay	0.5 Amp
Propagation delay	< 20 ms
Operating temperature	-20/ +70°C

Fig. 1 DC installation Continuous mode

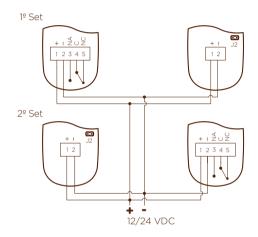


Fig. 2 AC Installation Synchronous mode


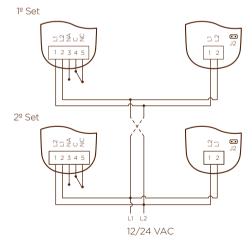


Fig. 3 Operating distance



1. PC front (UV filter)
2. Screw cover
3. Closure screws
4. Closure gasket
5. Base PA - FV
6. Watertightness gasket

Fig. 5 Jumper OFF Jumper ON

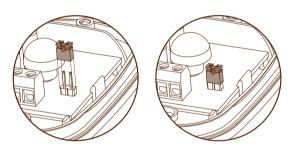

#### Transmitter

#### **Emitter**

7. Wall plug

8. Fixing screws

9. J1 / J2 jumpers

Designated relay outputs without obstacles

